

GUNI HUB™

UNIVERSAL ROTATING HUB ASSEMBLY

Please read installation instructions carefully before using.

Fig 1



1

- Remove the vehicle tire and wheel using a jack and lug wrench or air gun.
- Before installation, make sure the vehicle's hub/rotor is securely attached to the vehicle and free of any damage.
- Rotate the GUNI HUB™ 45 mounting assembly to align it with the bolt pattern of the vehicle. (see Fig 1)
- **IMPORTANT:** GUNI HUB™ 45 only fits 4 and/or 5 lug model cars, light SUVs, EVs and crossovers with PCD 4 x 3.98 - 4 x 5.39 and 5 x 3.90 - 5 x 5.12. For a complete list of fitments go to www.guniwheel.com/fitment

Fig 2



2

- Secure GUNI HUB™ 45 to the vehicle hub using the vehicles OEM lug nuts or lug bolts. (See Fig 2)
- *Note: Most OEM lug nuts or bolts fit GUNI HUB™ 45*
- *Note: There are GUNINUT and GUNIBOLT packs available online at GUNI WHEEL.COM or from your local distributor.*

Fig 3



3

- Make sure the lug nuts or lug bolts are tightened to snug and that GUNI HUB™ 45 is secure to the vehicle hub. (See Fig 3)
- If there is any noticeable movement of the GUNI HUB™ 45 once the lug nuts or bolts are tightened to at least 50lbs torque then the installation is not correct and should be remounted.


Fig 4



4

- Intall GUNI WHEEL™ 45 or 45S on GUNI HUB™ 45 (see Fig 4)
- Secure GUNI WHEEL™ 45 or 45S to GUNI HUB™ 45 using the provided GUNI WASHERS and M12 open-end GUNINUT.
- If there is any noticeable movement of the GUNI WHEEL™ once the lug nuts are tightened to at least 50lbs torque then the installation is not correct and should be remounted.
- *Note: One GUNI WHEEL™ lug hole should remain open to install the locking pin through GUNI WHEEL™ and into GUNI HUB™.*

Fig 5

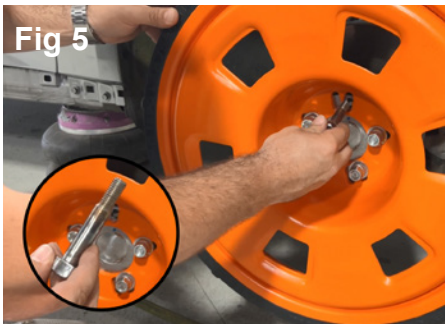

5

- **IMPORTANT:** Once GUNI WHEEL™ is secure to GUNI HUB, GUNI WHEEL is free-spinning and rotating independant of the vehicle braking system allowing the vehicle to be pushed in the shop or lot.
- **IMPORTANT:** Insert the provided locking pin through the open GUNI WHEEL™ lug hole using your hand to screw to tighten the locking pin into GUNI HUB™. (See Fig 5)
- Unscrew and remove the locking pin to continue free-wheel rotation with GUNI HUB™.